
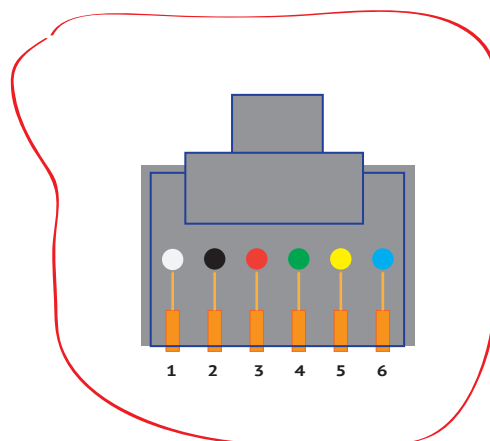


## СХЕМА КОММУТАЦИИ ИНТЕРФЕЙСА ДЕНЕЖНОГО ЯЩИКА ePOS CASH DRAWER ( EPSON )

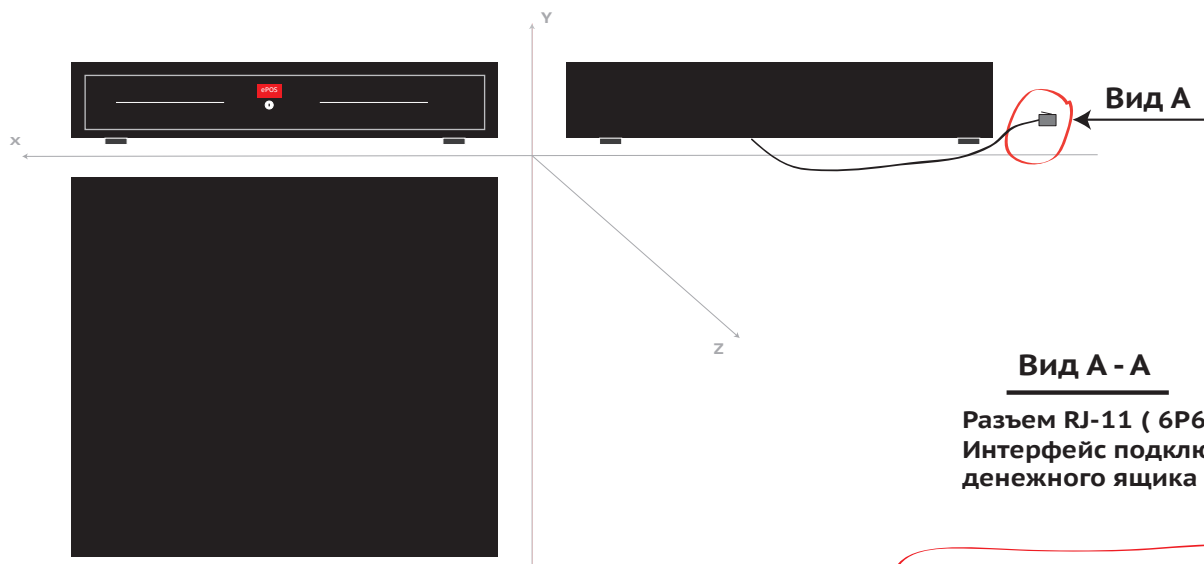

Pin No	Signal name	Function	I/O direction
1	GND	Frame ground	-
2	DRD1	Drawer kick-out drive signal 1	IN
3	DRDS	Drawer open/close signal	OUT
4	+24V	Drive power	-
5	DRD2	Drawer kick-out drive signal 2	IN
6	GND	Frame ground	-